

POS—mate



Wireless Barcode Scanner

PM-BCBT2D-W

Instruction Manual

Contents

| | |
|---|----|
| Warranty | 4 |
| Get To Know Your Wireless Barcode Scanner | 5 |
| LED Indicators | 6 |
| Beep Indicators | 6 |
| Setting Up Your Wireless Barcode Scanner | 7 |
| Connecting to Square App for iOS/iPadOS | 7 |
| Automatic Pairing | 8 |
| iOS / iPadOS Virtual Keyboard Control | 9 |
| Vibration Settings | 9 |
| Volume Settings | 10 |
| Manual Pairing | 10 |
| Sleep Settings | 11 |
| Automatic Scanning Mode | 13 |
| Barcode Type Settings | 13 |
| Data Transfer Settings | 14 |
| Suffix Settings | 16 |
| Letter Conversion Settings | 17 |
| Hide Character Settings | 17 |
| Keyboard Language Settings | 19 |
| Restore Factory Settings | 20 |
| System Information | 20 |
| SPP and BLE Pairing | 20 |
| Technical Information | 22 |
| Troubleshooting | 23 |

Warranty

POS-mate reserves the right to make changes to any product to improve reliability, function, or design. POS-mate does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein. No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which POS-mate products might be used. An implied license exists only for equipment, circuits, and subsystems contained in POS-mate products.


For the complete hardware product warranty statement, go to:

<http://www.pos-mate.com/warranty>

For Australia Only

This warranty is given by PICA Australia Pty. Ltd (ABN 70 113 812 721) of 11/37 Keilor Park Drive, Keilor Park, Vic. 3042 Australia, as the owner of the brand referred to as POS-mate. POS-mate products are subject to rigorous testing and assessment as to their quality and suitability for purpose. Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. POS-mate's Australian limited warranty above is in addition to any rights and remedies you may have under Australian Consumer Law. If you have any queries, please call POS-mate on +61393367336.

Get To Know Your Wireless Barcode Scanner

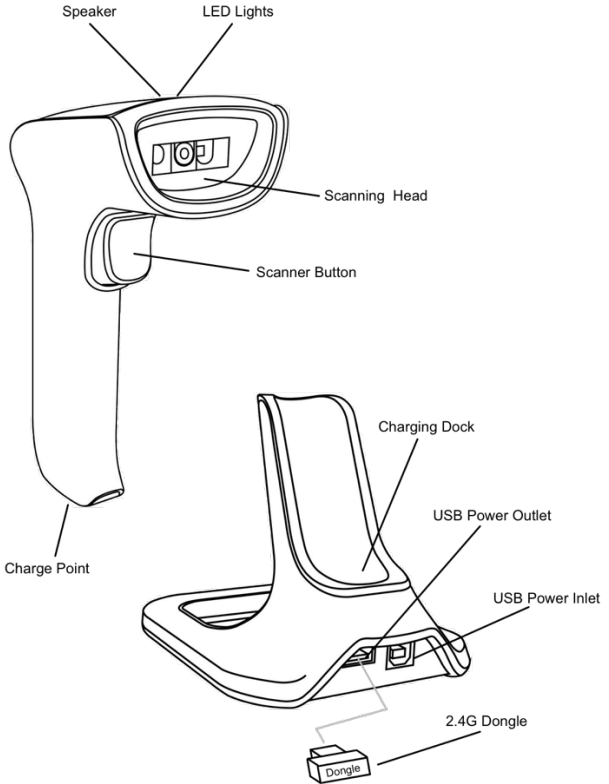

LED Indicators

| LED Sequence | Description |
|--------------------------------|-----------------------------|
| Blue - on | Connected |
| Blue - flash | Scan success |
| Red - on | Charging |
| Red and Blue - on | Connected and charging |
| Blue – alternatively flashing | HID pairing mode |
| Blue – simultaneously flashing | BLE pairing mode |
| Blue only - flashing | 2.4G pairing mode |
| Blue only - flashing | SPP pairing mode |
| No LED | Not connected, not charging |

Beep Indicators

| Beep Sequence | Description |
|---------------|---------------------------------------|
| 1 long beep | Power ON/OFF |
| 1 short beep | Scan or pairing success |
| 2 short beeps | Wireless disconnection (out of range) |
| 3 short beeps | Scanner memory full |
| 5 short beeps | Recharge scanner |

Setting Up Your Wireless Barcode Scanner

- Remove your POS-mate Wireless Barcode Scanner from its packaging and place it on your countertop.
- Insert one end of the cable supplied into the Charging Dock's USB Power Inlet, the other end into a USB power supply, i.e. PC or wall socket.
 - Insert a USB cable into the Dock's USB Power Outlet to charge your smartphone or tablet.
- Place your POS-mate Wireless Barcode Scanner into the Charging Dock. It will fully charge within 3 hours.
- Pair to your device.

Connecting to Square App for iOS/iPadOS

To connect your POS-mate Wireless Barcode Scanner to Square App for iOS, iPadOS or Square Stand, follow the setup instructions at



<http://square.com/help/article/5143>
or use your scanner to scan the
QR code into your browser

POS-mate Wireless Barcode Scanner is not compatible with Square App for Android or Square Terminal.

Automatic Pairing

Automatic Bluetooth Pairing

Press and hold your POS-mate Wireless Barcode Scanner button for 8 seconds. The blue LED lights on the scanner will start alternatively flashing. Turn on Bluetooth on your smartphone, tablet, Mac or PC, search for “POS-mate Scanner” and pair. Your POS-mate Wireless Barcode Scanner will give a short beep, the blue LED will remain solid and is connected.

Disabling Automatic Pairing

Automatic Pairing is a default feature of your POS-mate Wireless Barcode Scanner. After pairing with your device, you may choose to disable this feature. To disable automatic pairing, scan the Disable Auto Pairing barcode. You can re-enable Automatic Pairing at any time by scanning the Enable Automatic Pairing barcode.



Disable Auto Pairing



Enable Automatic Pairing (default)

iOS / iPadOS Virtual Keyboard Control

To show or hide your keyboard from your POS-mate Wireless Barcode Scanner, simply double click the scanner button to show the keyboard, and double click the scanner button to hide. You may choose to disable this feature by scanning the Disable Show/Hide Keyboard barcode. You can re-enable iOS / iPadOS Virtual Keyboard at any time by scanning the Enable Show/Hide Keyboard barcode.



Disable Show/Hide Keyboard



Enable Show/Hide Keyboard (default)

Vibration Settings

Your POS-mate Wireless Barcode Scanner will vibrate each time the scanner button is pressed. You can turn off or on the vibration setting by scanning the desired barcode below.



Vibration Off



Vibration On (default)

Volume Settings

Your POS-mate Wireless Barcode Scanner will beep each time the scanner button is pressed. Adjust the volume of the scanning beep on your POS-mate Wireless Barcode Scanner to mute, low volume or high volume by scanning the desired barcode below.



Mute



Low Volume



High Volume (default)

Manual Pairing

Manual Bluetooth HID Mode Pairing

Manually pair your POS-mate Wireless Barcode Scanner by scanning the Bluetooth HID Mode and Pair barcodes. The blue LED lights on the scanner will start alternatively flashing. Turn on Bluetooth on your smartphone, tablet, Mac or PC, search for “POS-mate Scanner” and pair. Your POS-mate Wireless Barcode Scanner will give a short beep, the blue LED will remain solid and is connected.



Bluetooth HID Mode



Pair

Wireless 2.4G Pairing

Wireless 2.4G Mode supports PC systems that do not have built in Bluetooth connectivity. Scan the Wireless 2.4G and Pair barcodes. The blue LED light on the scanner will flash, remove the USB “Dongle” from the dock and plug it into your PC within 60 seconds. Your POS-mate Wireless Barcode Scanner will give a short beep, the blue LED will remain solid and is connected.



Wireless 2.4G



Pair

Sleep Settings

Your POS-mate Wireless Barcode Scanner will go to sleep after 5 minutes of no use. Press the scanner button to wake your scanner, it will connect to your device in a few seconds. To adjust the duration before your scanner sleeps, scan the desired barcode.



30 Seconds



1 Minute



2 Minutes



5 Minutes (default)



10 Minutes



30 Minutes



Never Sleep



Sleep Immediately

Automatic Scanning Mode

Your POS-mate Wireless Barcode Scanner can be programmed to automatically scan when movement is detected without the need for the scanner button to be pressed. Scan the Auto Scan Mode barcode to enable this feature, you can disable this feature at any time by scanning the Manual Scan Mode barcode.



Auto Scan Mode



Manual Scan Mode (default)

Barcode Type Settings

Your POS-mate Wireless Barcode Scanner will scan both standard barcodes (1D / linear) or QR barcodes (2D / matrix). You can disable the scanner from reading either type of barcode by scanning the desired barcode below. Scan either or both enable barcodes for the desired setting.



Disable 1D Barcodes



Enable 1D Barcodes (default)



Disable 2D Barcodes



Enable 2D Barcodes (default)

Data Transfer Settings

Data Transfer Mode

Your POS-mate Wireless Barcode Scanner will transfer the data scanned instantly to the connected device. Should the scanner need to be used at a distance to the connected device, the scanner can be configured to store the data and transfer it at a later time by scanning the Storage Mode barcode.

This can be changed at any time by scanning the Instant Mode barcode. Typically, the maximum distance for Bluetooth is 30 meters and for 2.4G is 150 meters, these measurements may change due to electrical and/or environmental factors.



Instant Mode (default)



Storage Mode

Data Transfer Control

If your POS-mate Wireless Barcode Scanner is set to Storage Mode, you will need to transfer the data manually when within signal range of your connected device. When in range, scan the Upload Data barcode to upload all the stored barcodes. Once the data is transferred, the data can be cleared by scanning the Clear All Data barcode. Checking the number of barcodes held in the scanner memory can be done by scanning the Total Data Stored barcode.



Upload Data



Clear All Data



Total Data Stored

Data Transfer Rate

Your POS-mate Wireless Barcode Scanner has multiple data transfer rates for Bluetooth HID/SPP/BLE. Depending on your environment (electrical interference) you may need to slow down your transfer rate to ensure all data is transferred correctly. Scan the required scan rate barcodes to adjust.



Fast (default)



Medium



Low



Very Low

Suffix Settings

Your POS-mate Wireless Barcode Scanner will simulate pushing the Return or Enter key on your keyboard at the end of each scan, also known as Carriage Return (CR). Your scanner can be programmed to simulate a Tab on your keyboard or simulate nothing after each scan. Scan the required barcode for the desired setting.



Add Return / Enter (CR) (default)



Add Tab



Remove Suffix

Letter Conversion Settings

Your POS-mate Wireless Barcode Scanner can be set to change the letter case on scanned barcodes, by scanning the ALL CAPITAL LETTERS or all lowercase letters barcodes below.

eg.; Barcode data is ABC123abc,

ALL CAPITAL LETTERS will scan as ABC123ABC

all lowercase letters will scan as abc123abc

You can cancel letter conversions at any time by scanning the Cancel Letter Conversion barcode.



ALL CAPITAL LETTERS



all lowercase letters



Cancel Letter Conversion (default)

Hide Character Settings

Your POS-mate Wireless Barcode Scanner can hide 1, 2, 3 or 4 characters at the start or the end of a barcode. Simply scan the Hide First “X” Barcode Characters and the Hide 1,2,3 or 4 Character barcodes to hide the first characters. To cancel scan the Hide First “X” Barcode Characters barcode.

Similarly scan Hide Last “X” Barcode Characters and the Hide 1,2,3 or 4 Character barcodes to hide the last characters.

 
To cancel scan the Hide Last “X” Barcode Characters barcode.




Hide First "X" Barcode Characters




Hide Last "X" Barcode Characters



Hide 1 Character

 

Hide 2 Characters

 

Hide 3 Characters



Hide 4 Characters



Cancel Hide First "X" Barcode Characters



Cancel Hide Last "X" Barcode Characters

Keyboard Language Settings

The POS-mate Wireless Barcode Scanner default keyboard language is American English. You can adjust your keyboard language setting by scanning the desired language barcode.



American English



British English



French



Japanese



International General Keyboard



Other languages can be found at www.pos-mate.com/support or use your scanner to scan the QR code into your browser.

Restore Factory Settings

Your POS-mate Wireless Barcode Scanner can be restored to its factory setting by scanning the barcode.



Restore Factory Settings

System Information



Firmware Version



Battery Level

SPP and BLE Pairing

SPP and BLE Pairing requires additional software.

Bluetooth SPP Mode Pairing

Bluetooth SPP mode supports additional software connected to Windows, MacOS, iOS, iPadOS, Android and other systems. Scan the SPP Mode and Pair barcodes. The blue LED light on the scanner will start flashing, search for “POS-mate Scanner” and pair. Your POS-mate Wireless Barcode Scanner will give a short beep, the blue LED will remain solid and is connected.



Bluetooth SPP Mode



Pair

Bluetooth BLE Mode Pairing

Bluetooth BLE mode supports additional software connected to Windows, MacOS, iOS, iPadOS, Android and other systems. Scan the BLE Mode and Pair barcodes. The blue LED lights on the scanner will start simultaneously flashing. Turn on Bluetooth on your smartphone, tablet, Mac or PC, search for “POS-mate Scanner” and pair. Your POS-mate Wireless Barcode Scanner will give a short beep, the blue LED will remain solid and is connected.



Bluetooth BLE Mode



Pair

Technical Information

| | |
|------------------------------|--|
| Product name | POS-mate Wireless Barcode Scanner |
| Product code | PM-BCBT2D-W |
| UPC | 746935310325 |
| Scanner type | CMOS |
| Light source | White Led + Red LED |
| CPU | 32bit |
| Resolution | 640 x 480 |
| Motion tolerance | 25cm/s |
| Depth of field | 3cm – 50cm |
| Scan mode | Manual (default) Autosensing |
| Scan Angle | Roll: $\pm 360^\circ$ Pitch: $\pm 60^\circ$ Skew: $\pm 30^\circ$ |
| Print contrast | $\geq 25\%$ |
| Wireless communication mode | Bluetooth (HID/SPP/BLE) 2.4Ghz |
| Wireless communication range | Bluetooth $\leq 30m$ 2.4Ghz $\leq 150m$ |
| Storage | 16Mb |
| Battery capacity | 2200mAh |
| Charge time | ≈ 3 hours |
| Operating time | ≈ 16 hours |
| Power requirements | DC 5v@200mA |
| Operating temperature | -20°C to 55C |
| Storage temperature | -20°C to 60C |
| Humidity | 5% to 95% (non-condensing) |
| Certificates | FCC, RoHS, CE, RCM |

Troubleshooting

| Scanner not working | |
|----------------------------|------------------------|
| Scanner not paired | Pair scanner |
| No battery power | Charge scanner battery |

| Scanner does not decode barcode | |
|---|--|
| Barcode is unreadable | Ensure barcode is complete, try another barcode |
| Some barcodes disabled | Review Barcode Type Settings |
| Distance between scanner and barcode is incorrect | Move barcode scanner to between 3cm and 50cm from barcode. |

| Scanner decodes barcode but does not transmit data | |
|---|---|
| Scanner is too far from connected device | Move closer to connected device or change to Storage Mode |
| Scanner is in Storage Mode | Upload data manually or change to Instant Mode |



www.pos-mate.com

