


Quick Start Guide RW873

 


Packing List

Standard Accessories

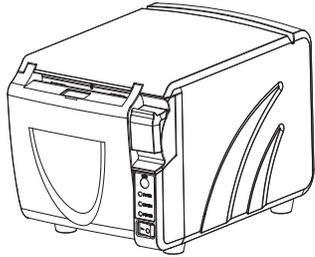

Printer



Quick Start Guide



Roll Paper



AC Adapter



Power Cord



USB Cable



CD

Optional Accessories



Serial Cable




Parallel Cable

Note:


- 1) The AC adapter and power cord vary by local or region.
- 2) The packing materials are actually dependent on the order.

Appearance


Front

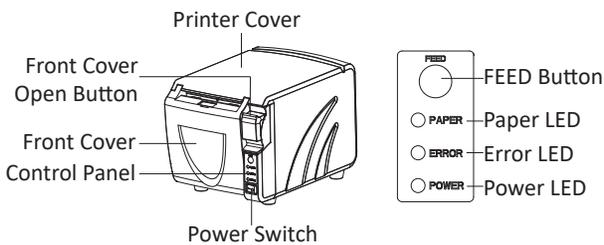


Back

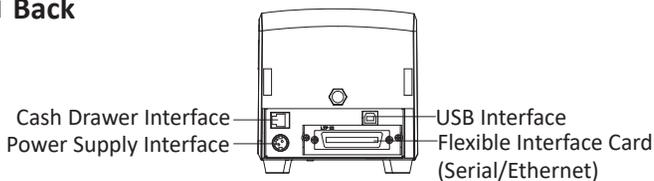

Opening Front Cover

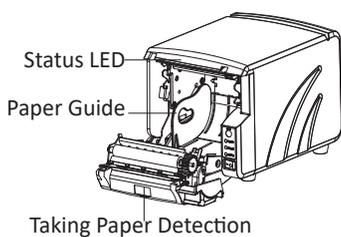


Bottom

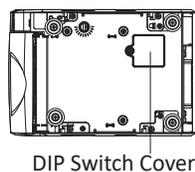

Paper Loading



1. Press the cover open button to open the front cover.

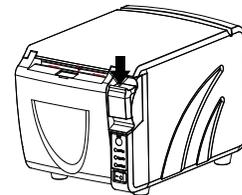

2. Remove the used roll paper core, if any.


3. In the correct direction of the roll paper, install the roll paper.

Thermosensitive layer

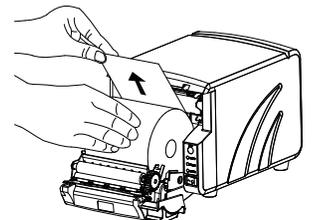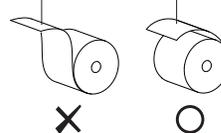


4. Pull out some roll paper, and close the front cover.

5. Tear off the roll paper.

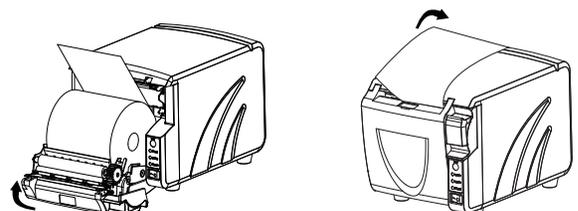

⚠ Note: The views above are for your reference. Ports vary by your choice.

Connect the Power Supply

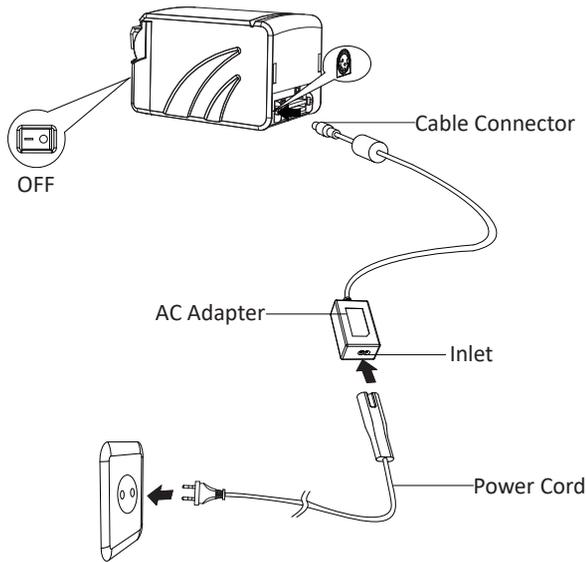

1. Turn off the printer power.
2. Plug in the cable connector of the AC adapter to the power connector at the rear of the printer.
3. Connect the power cord to the inlet of AC adapter, and insert the power cord plug into a suitable wall outlet.

• DIP Switch 2

SW	Function	ON	OFF	Default
2-1	Chinese/English mode	English	Chinese	ON
2-2	Internal beeper control	Disable	Enable	OFF
2-3	Auto cutter	Disable	Enable	OFF
2-4	Busy conditions	Receive buffer full	Printer offline or Receive buffer full	OFF
2-5	Print density	Refer to table 6-2		OFF
2-6				OFF
2-7				OFF
2-8	Printing dots quantity	512	576	OFF

Table 6-1 Baud Rate Selection

Transmission Speed	1-6	1-7	1-8	Default
2400	ON	OFF	OFF	9600
4800	ON	OFF	ON	
9600	OFF	ON	OFF	
19200	OFF	OFF	OFF	
38400	OFF	ON	ON	
57600	OFF	OFF	ON	
115200	ON	ON	ON	

Table 6-2 Print Density Selection

2-5	2-6	2-7	Print Density	Default
ON	ON	Reserved	1(Light)	2
OFF	OFF	Reserved	2	
ON	OFF	Reserved	3	
OFF	ON	Reserved	4(Dark)	

Auto Cutter Enable/Disable Selection

DIP Switch Set 2	
SW 2-3	ON Auto Cutter Disable
	OFF Auto Cutter Enable
Application	Ignore auto cutter error for continuous printing

DIP Switches Setting

■ Serial Interface

• DIP Switch 1

SW	Function	ON	OFF	Default
1-1	Automatic line feed	Enable	Disable	OFF
1-2	Handshake	XON/XOFF	DTR/DSR	OFF
1-3	Bit length	7bits	8bits	OFF
1-4	Parity check	Yes	No	OFF
1-5	Parity selection	Even	Odd	OFF
1-6	Baud rate selection(bps)	Refer to table 6-1		OFF
1-7				ON
1-8				OFF

• DIP Switch 2

SW	Function	ON	OFF	Default
2-1	Chinese/English mode	English	Chinese	ON
2-2	Internal beeper control	Disable	Enable	OFF
2-3	Auto cutter	Disable	Enable	OFF
2-4	Busy conditions	Receive buffer full	Printer offline or Receive buffer full	OFF
2-5	Print density	Refer to table 6-2		OFF
2-6				OFF
2-7				OFF
2-8	Printing dots quantity	512	576	OFF


■ USB and Ethernet Interface

• DIP Switch 1

SW	Function	ON	OFF	Default
1-1	Automatic line feed	Enable	Disable	OFF
1-2~1-8	Reserved	--	--	OFF

Communication Parameters and Default Language Setting

 1. Please refer to table 6-1 for Baud Rate Selection.
2. For ethernet interface card TCP/IP setting, please power on printer then connect to PC LAN port. Input `http://192.168.0.31` in PC browser and set (Default IP setting:192.168.0.31). Press and hold on the reset button in the interface card, then power on again to go back to the default setting.



3. The default language is English. Please select DIP switch 2 to choose the multi-languages.