


Universal Printer Stand


PROPER

User Guide

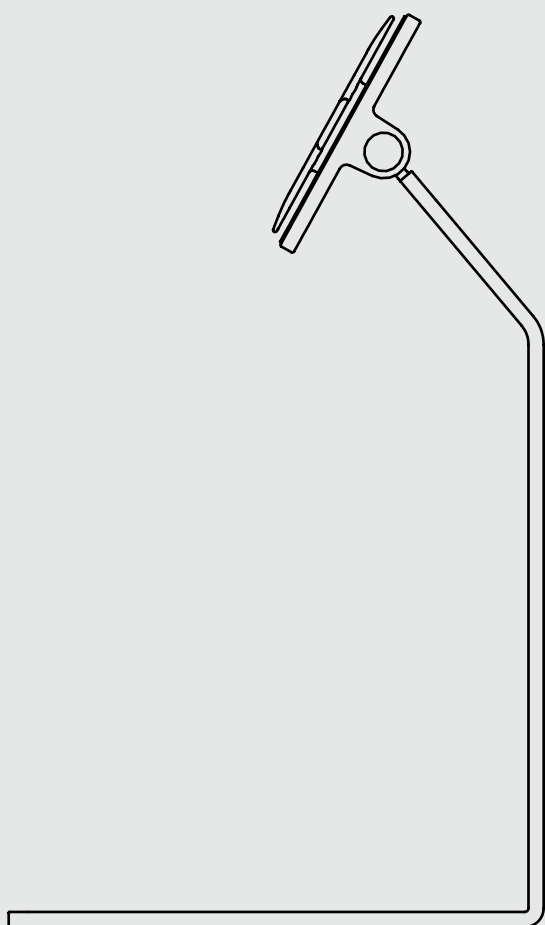


What is Included

1x Printer Stand

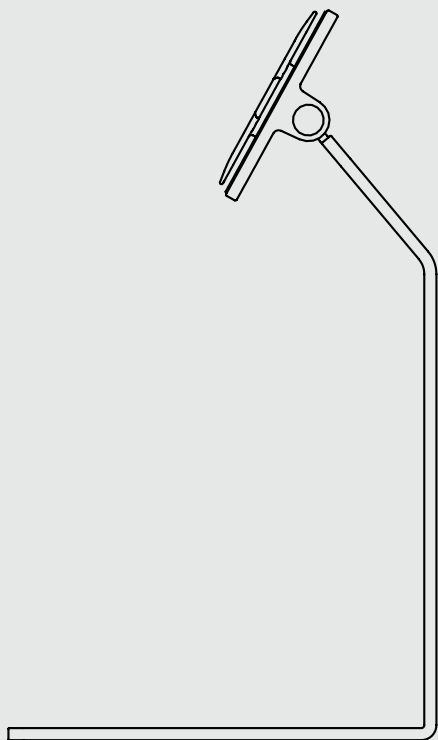



1x Connect Adapter

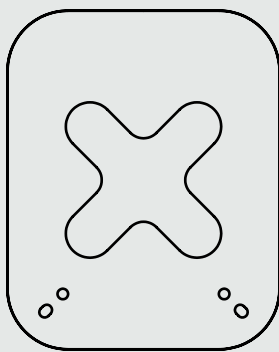

Base Dimensions

Use the drawings below, along with your selected tablet dimensions, to confirm adequate countertop clearance. The drawings also indicate the maximum supported receipt printer dimensions; however, a printer height of under 130 mm is recommended for optimal tablet angle adjustability.


Units: mm

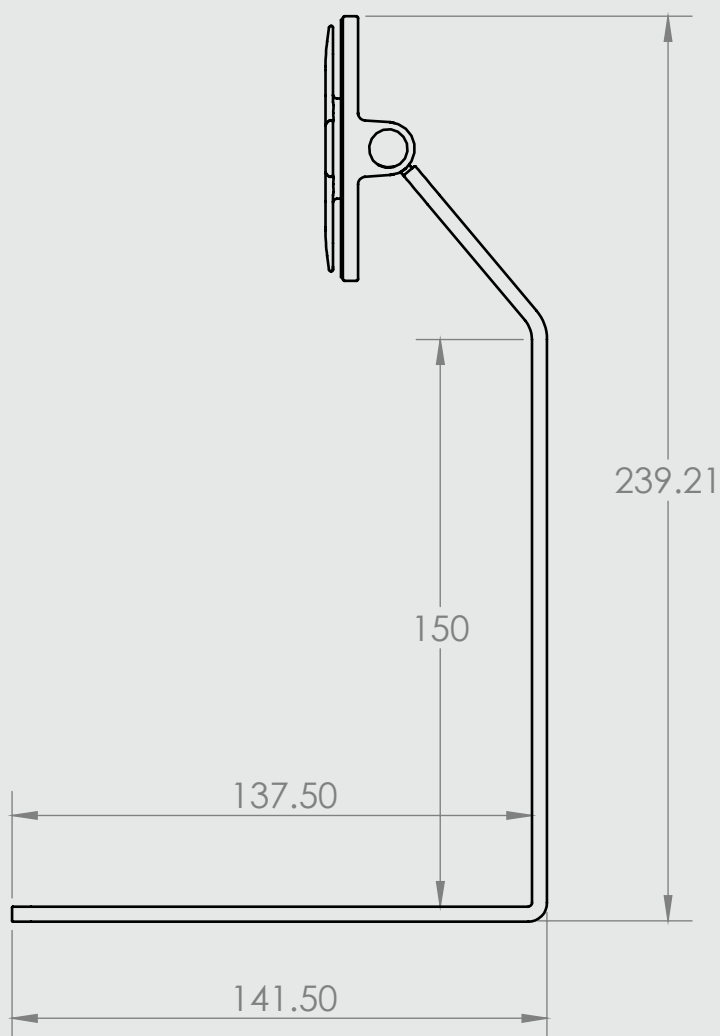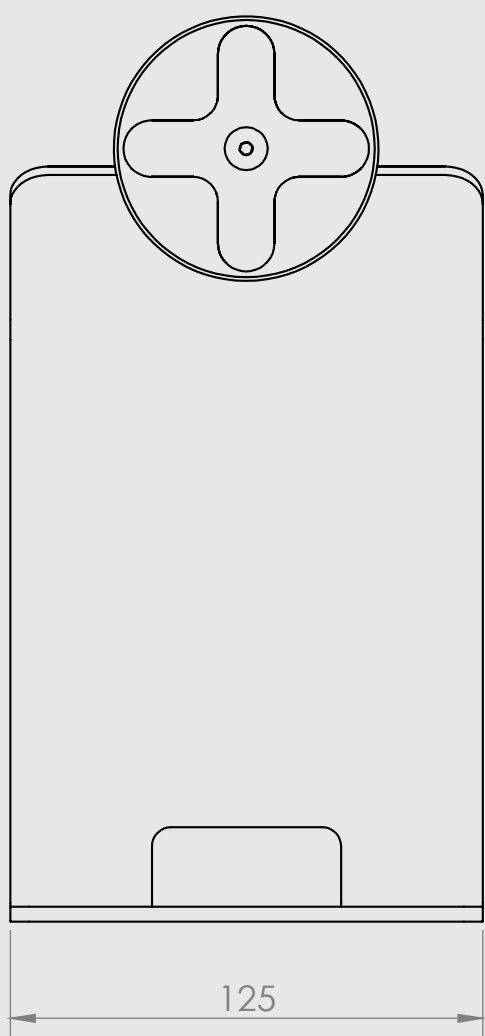

Mounting Dimensions

Use the drawings below as a hole pattern reference when mounting your Printer Stand and preparing compatible mounting hardware.

Units: mm

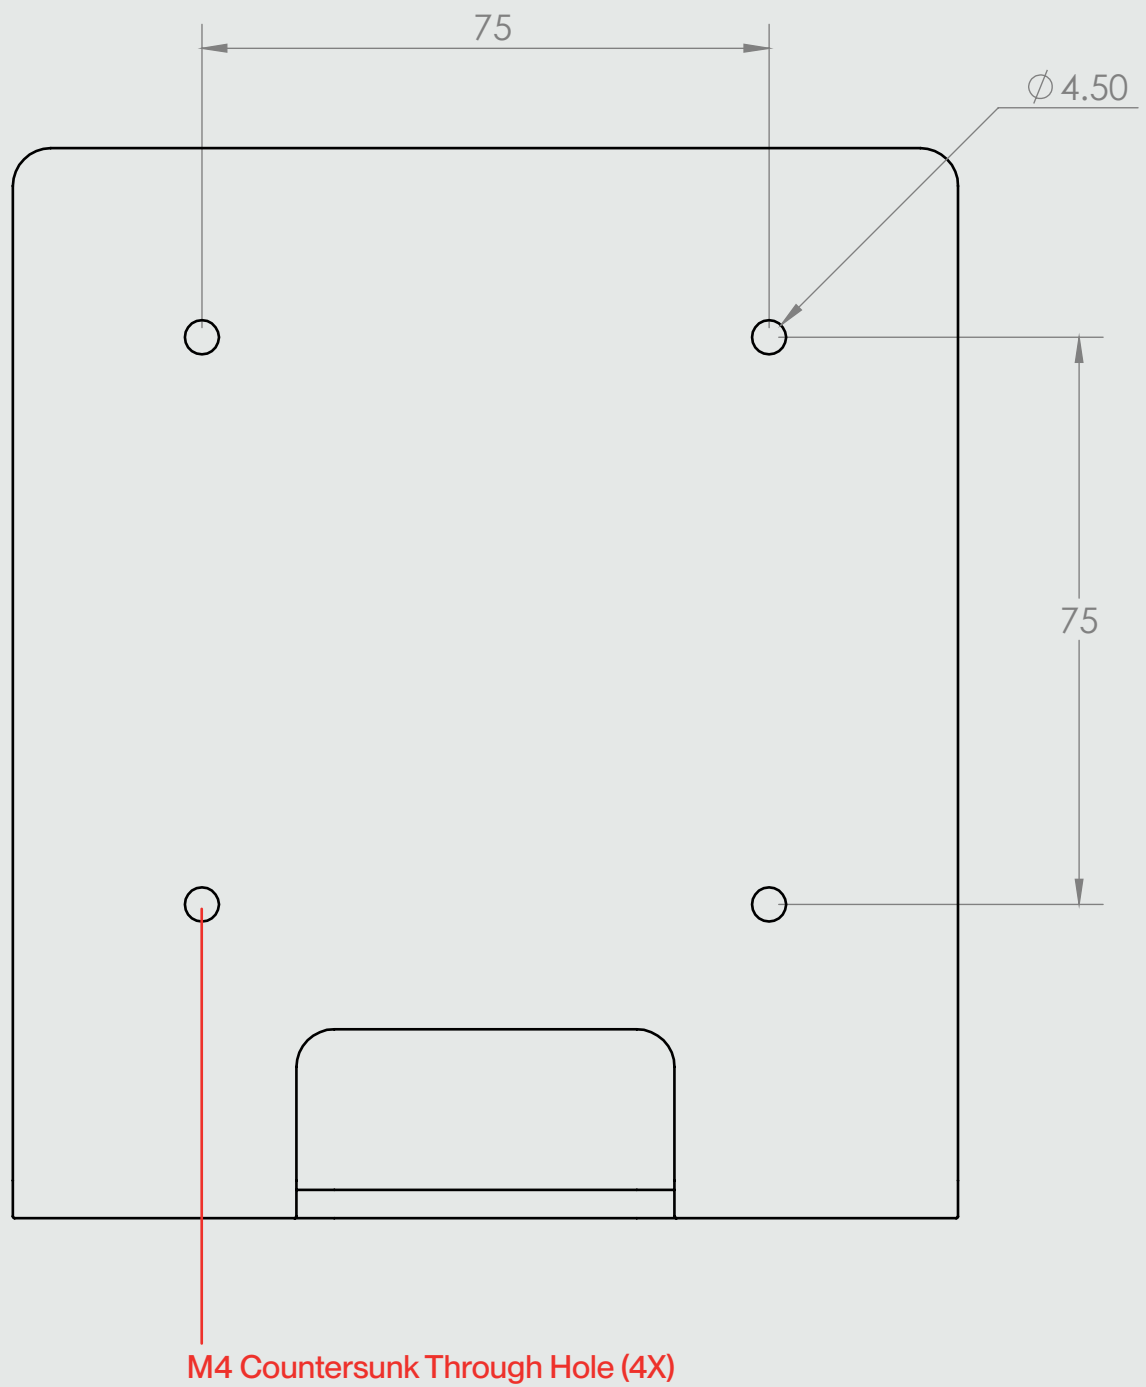


Instructions

Step 1:

Use the Mounting Dimensions drawings (page 4) as a guide to supply hardware and accurately secure the Printer Stand using screws.


Step 2:

To mount your Connect Adapter to your chosen tablet begin by gently removing the 4 adhesive films using the pull tabs as shown below

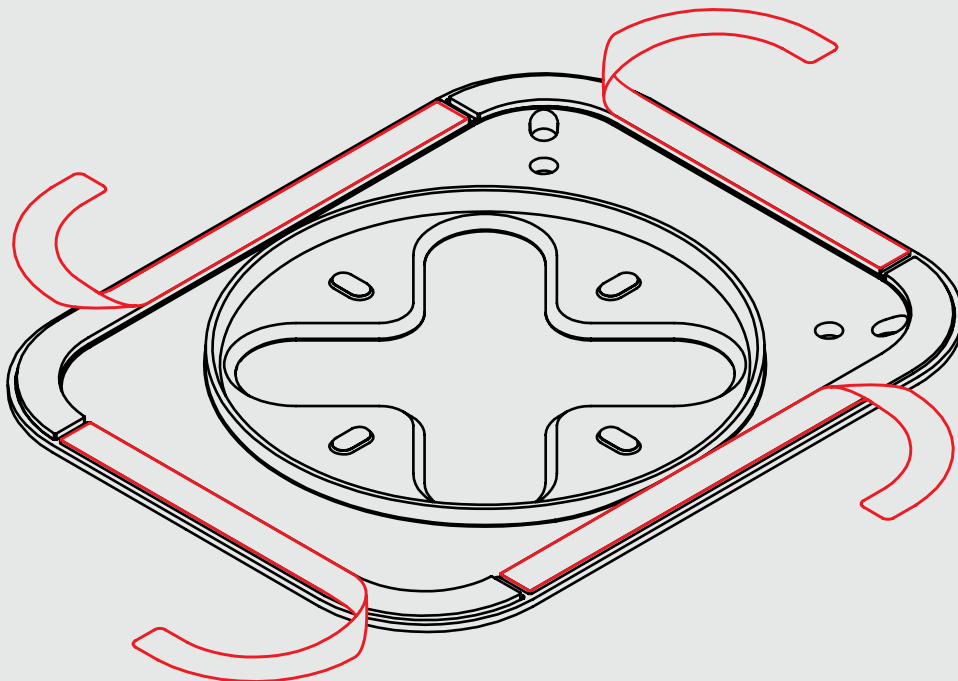


Step 3:

Carefully align and place the Connect Adapter on to the chosen tablet. Apply steady pressure for 20-30 seconds to ensure a strong bond.

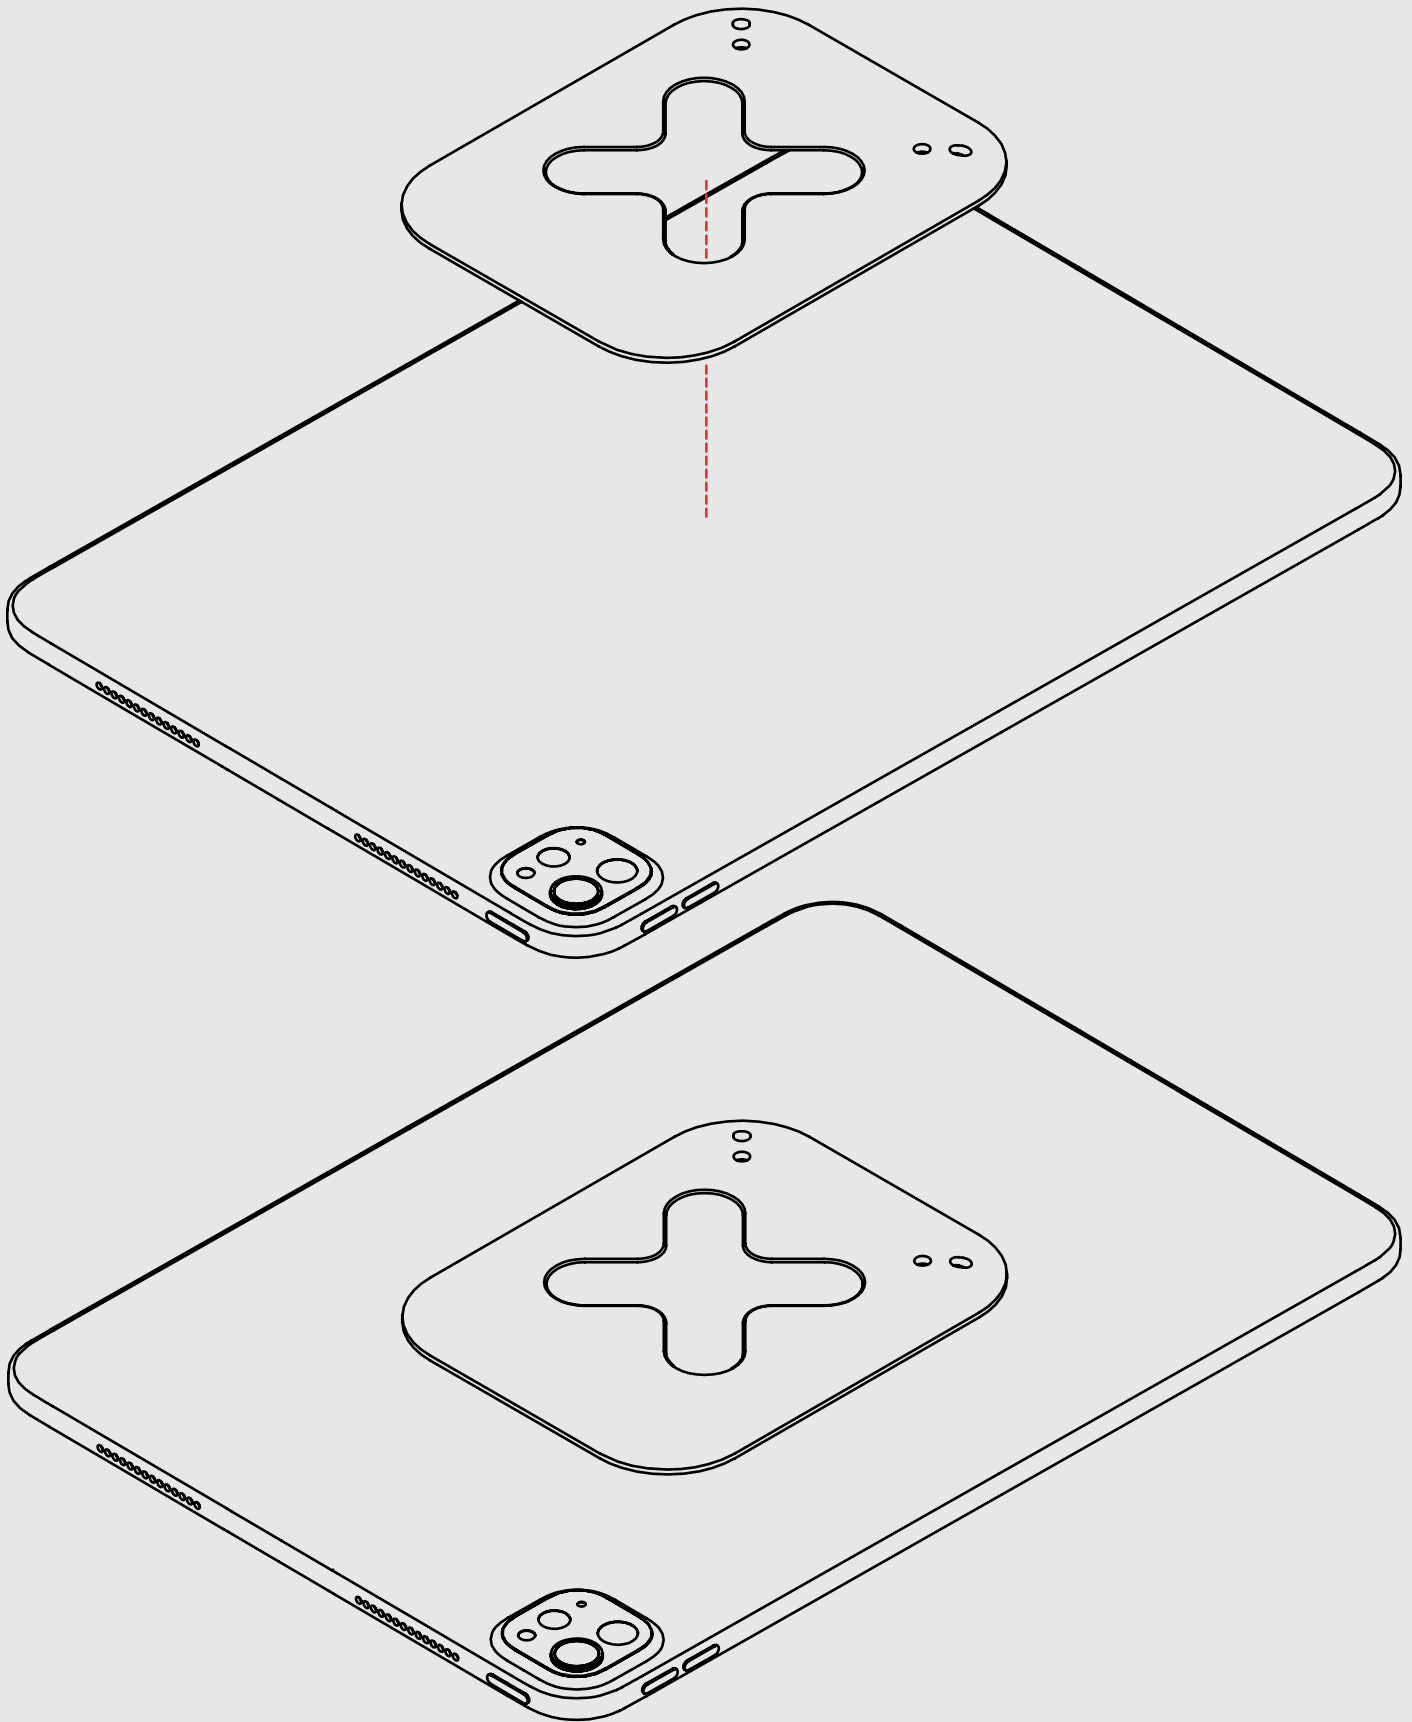



Step 4:

Position the tablet onto the mount surface of the Printer Stand at a 45° angle, ensuring the X-shaped cavity on the Connect Adapter aligns and seats correctly with the corresponding X-shaped detail on the stand.

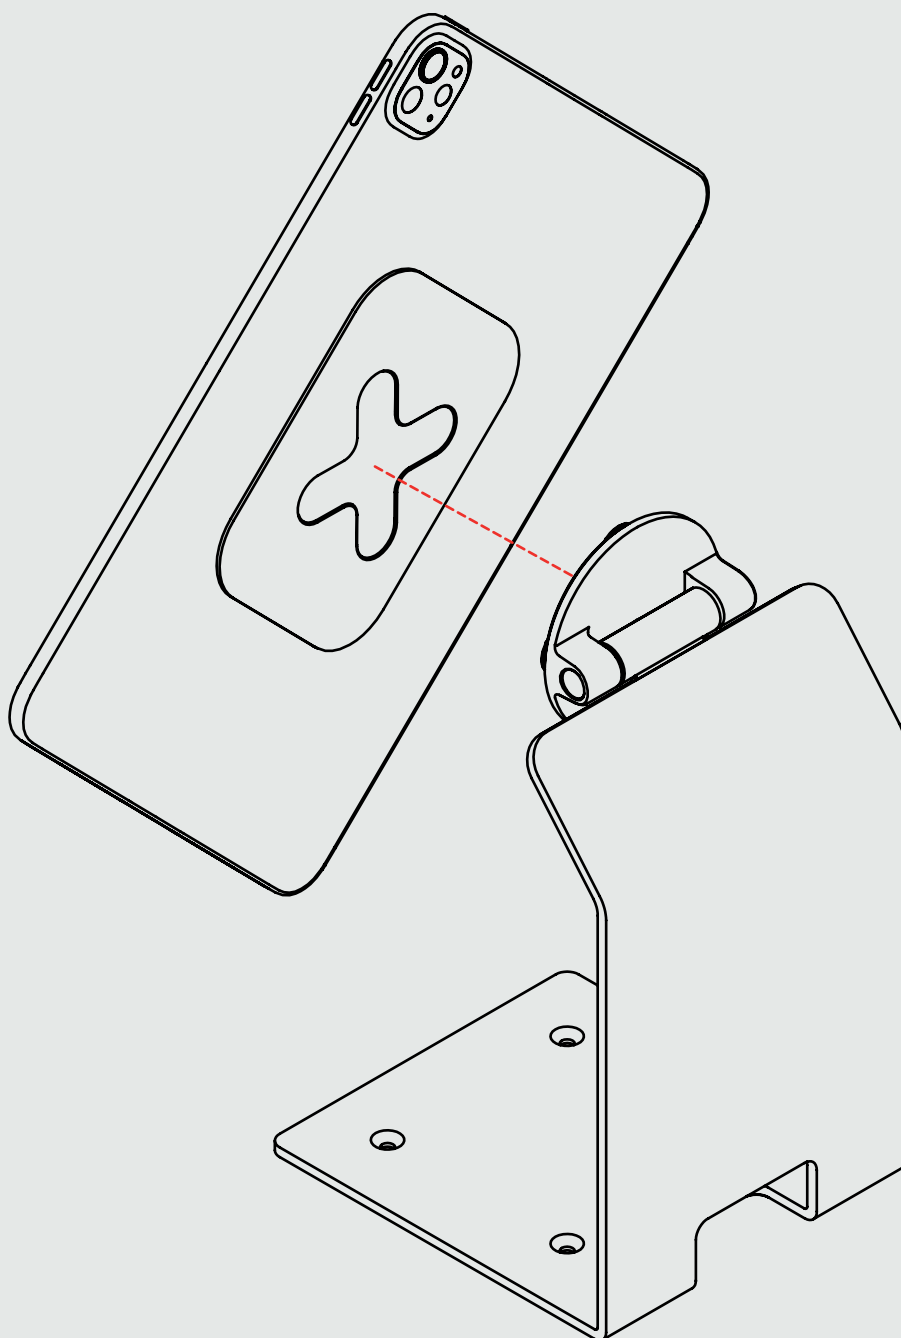

Step 5:

Once seated, rotate the tablet 45° until a click is heard.

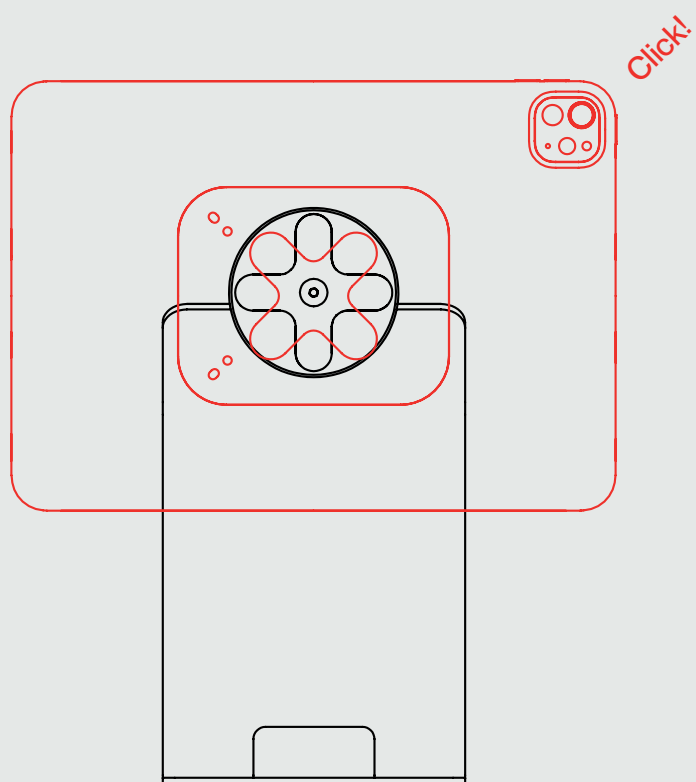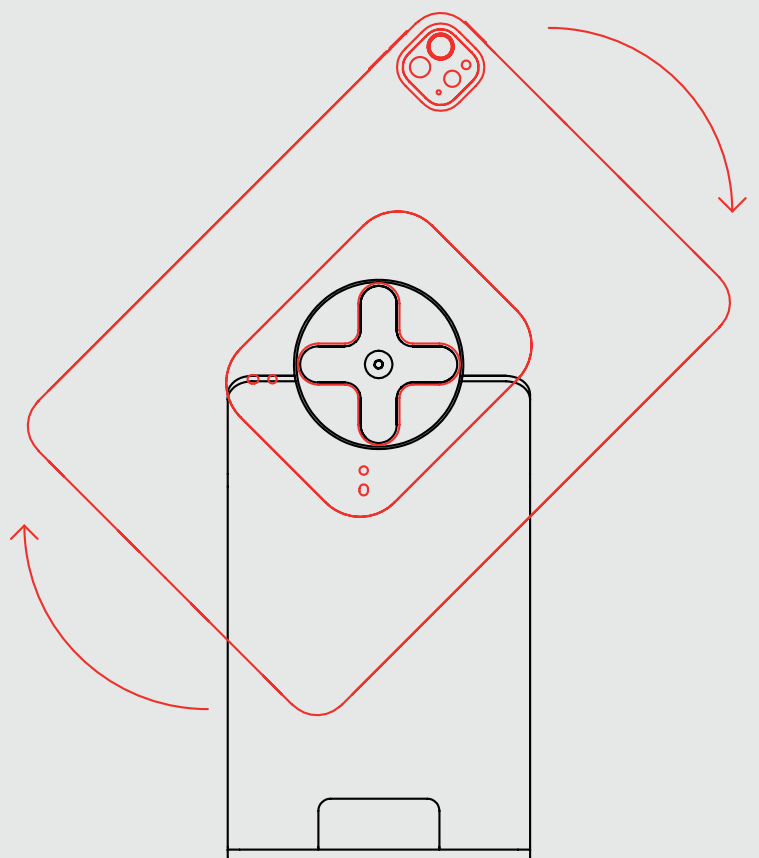

Step 6:

Install the selected receipt printer as shown below. Use the rear opening in the Printer Stand to route cables neatly.

